

Appendix

Anti-theft function

You can set a password for the navigation system. If the back-up lead is cut or **RESET** button is pressed after the password is set, the navigation system prompts for the password next boot-up.

If the incorrect password is entered, the navigation and AV functions cannot be performed.

Setting the password

Set both the password and a hint phrase at the same time. Set a password based on the hint phrase. The hint phrase will remind you of the password in case you forget it.

- 1 With the map displayed, press the MENU button.**
- 2 Touch "Settings" in the NAVI MENU.**
- 3 Touch "System Options".**
- 4 Touch Area1, followed by Area2, and then touch and hold Area3.**



The password setting screen appears.

- 5 Touch "Set password".**
- 6 Select a hint phrase.**
 - ☐ Touching or switches to the next or previous page in the list.
- 7 Touch "OK".**
- 8 Enter the password you want to set.**
 - ☐ Five to sixteen characters can be entered for a password.

- 9 Touch "OK".**

- 10 Reenter the password in step 7 to confirm the setting.**

- 11 Touch "OK".**

The password is set.

Enter the password

In password input screen, you must enter the current password. If you enter the incorrect password three times, the navigation system is locked.

- 1 Enter the password.**

- 2 Touch "OK".**

The password mode is canceled.

Delete the password

The current password can be deleted.

- 1 With the map displayed, press the MENU button.**
- 2 Touch "Settings" in the NAVI MENU.**
- 3 Touch "System Options".**
- 4 Touch Area1, followed by Area2, and then touch and hold Area3.**

The password setting screen appears.

- 5 Touch "Clear password".**

- 6 Enter the current password.**

- 7 Touch "OK".**

- 8 Touch "Yes".**

The current password is deleted.

If the password is forgotten

Contact the nearest authorized Pioneer Service Station.