

1 Touch **[Settings]** in the navigation menu, then touch **[Hardware]**.

2 Touch **[Hard Disk Info]**.

Hard disk space (%)



Registering the Home Location and Favorite Location

You can register one home location and one favorite location. You can change the registered information later. You might find it useful to register your workplace or a relative's home as your favorite location.

1 Touch **[Settings]** in the navigation menu, then touch **[Defined Locations]**.


2 Touch **[Go to]**.

When registering your home location, touch **[Home]**.



3 Search for a location to register.

You can select a method of location search.

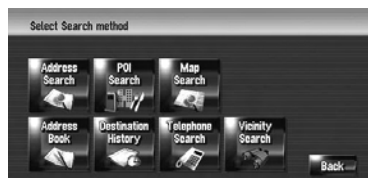

- ▷ Address Search → Page 28
- ▷ Information on searching for locations to register → Page 53 to 58
- If you select **[Map Search]**, move the scroll cursor to the place you want to set and touch **[OK]**.

4 Point the scroll cursor to the location you want to register and touch **[OK]**.

The location is registered, and the Edit registered information screen appears.

- ▷ "Editing the entry in "Address Book"" → Page 63

5 Touch **[OK]**.

Completes the registration.

Changing the Background Picture

Be sure to read "Limitations for importing pictures" before creating a CD-R (-RW) and "Precautions when changing the Splash Screen".

- ▷ "Limitations for importing pictures" → Page 101
- ▷ "Precautions when changing the Splash Screen" → Page 102

In the menu operation screen, you can customize a picture for the background. Some pictures are already stored in the hard disk drive, and you can also import JPEG format pictures, such as a picture from your digital camera, by using a CD-R (-RW). You can use pictures as background pictures by burning them onto a CD-R (-RW) with your PC and inserting it into the navigation system.

The following types of background pictures can be changed:

- **Splash Screen:** The screen that appears when the Navigation system starts up.
- **Navigation Background:** Background picture of the navigation menu screen.
- **AV Background:** Background picture during the operation of audio source screen.

Here, a method for changing the background picture is described with an example of loading a picture stored on a CD-R (-RW) onto the navigation system as the background picture.

1 Check that no disc is inserted, and insert your CD-R (-RW) to the disc loading slot.

2 Touch [Settings] in the navigation menu, then touch [Background Picture Setting].

The picture selected for each screen is indicated on the right side of [Splash Screen], [Navigation Background] and [AV Background] items.

3 Touch [Splash Screen], [Navigation Background] or [AV Background].



4 Touch [Import from Disc].



The list of the pictures stored in the CD-R (-RW) is displayed.

On this screen, you can select the following item:

[Back to Original], [Back to PIONEER Original]:

The picture originally used when the system was purchased is selected.

- ☐ Touching an option other than [Import from Disc] allows you to select a background image stored on the hard disk drive.

5 Touch a picture you want to set.

6 Touch [OK].



If you touch [OK], the background image starts changing. After a short while, the confirmation screen appears.

- ☐ When the image has a large file size, it takes more time to change the Background Picture. Do not perform other operations until the message "**Updating. Please do not turn off the power.**" disappears.
- ☐ If you want to change to another picture, touch [Back] to return to Step 4.
- ☐ When the picture starts to change, do not turn off the vehicle engine until the message appears to indicate that the picture has finished changing.



Limitations for importing pictures

When you burn a CD-R (-RW), make sure the total data size of the CD-R (-RW) is greater than 100MB by storing dummy data or other filler information. Otherwise, the disc may not be recognized by the built-in DVD drive.

- ☐ You cannot use a CD-R (-RW) containing MP3 files or Audio data (CD-DA part) for importing pictures.
- ☐ When storing pictures on a CD-R (-RW), create a folder named "**Pictures**" in the CD-R (-RW), and store the picture files in this folder. (Up to 200 picture files can be used in total, including pictures that are already stored in the hard disk drive and pictures in the CD-R (-RW).)
- ☐ When you burn a CD-R (-RW), limit the number of folder hierarchy levels to eight.
- ☐ You can only use a CD-R (-RW) finalized with single-session for importing pictures.
- ☐ You can only use a CD-R (-RW) finalized with "Mode1" for importing pictures.
- ☐ Only JPEG format (".jpg" or ".JPG") pictures can be used. Progressive format JPEG pictures cannot be used.

- ❑ Using only the standard Latin characters (alphabets of both cases: A-Z, a-z) and numbers (0-9) is recommended for the file name. If you want to use letters with diacritical marks (such as ä or è) for file name, finalize the CD-R(RW) with Joliet (Unicode) format.
- ❑ Pictures up to a maximum of 2 592 x 1 944 pixels can be used. We cannot guarantee proper operation for a picture bigger than this size.
- ❑ After changing a set image that was imported from a CD-R (RW), you must use the CD-R (RW) where the image is recorded to restore the previous Splash Screen.

.....

.....

Precautions when changing the Splash Screen

The following is the default Splash Screen for the Navigation System.

[PIONEER Original]



If an image other than the one shown above is previously set (such as an image from the dealer or other source) and you change the Splash Screen once, you must use the CD-R (RW) where the image is recorded to change the screen back to this image.

.....

Using the Demonstration Guidance

This is a demonstration function for shops. After a route is set, the simulation of the route guidance to a destination is automatically displayed. Normally, set this to **[Off]**.

1 Touch **[Settings]** in the navigation menu.

2 Touch **[Demo Mode]** to change the setting.

Each time you touch the key changes that setting.

[On]:

Repeat demo drive.

[Off] (default):

Demo Mode is set off.

Correcting the Current Location

Touch the screen to adjust the current position and direction of the vehicle displayed on the map.

1 Touch **[Settings]** in the navigation menu, then touch **[Modify Current Location]**.

2 Scroll to the position where you want to set, then touch **[OK]**.

3 Touch the arrow key on the screen to set the direction, then touch **[OK]**.

Restoring the Default Setting

Resets various settings registered to the navigation system and restores to the default or factory settings.

1 Touch **[Settings]** in the navigation menu, then touch **[Restore Factory Settings]**.

2 Touch **[Yes]** to clear the current setting.

- ❑ Touch **[No]** to cancel clear the current setting.

➤ "Returning the Navigation System to the Default or Factory Settings" → Page 179