


Customizing AVIC Navigation DVD's using Nero

By: JasonH

www.AVIC411.com


1. Select all Files/Folders from the Navigation DVD

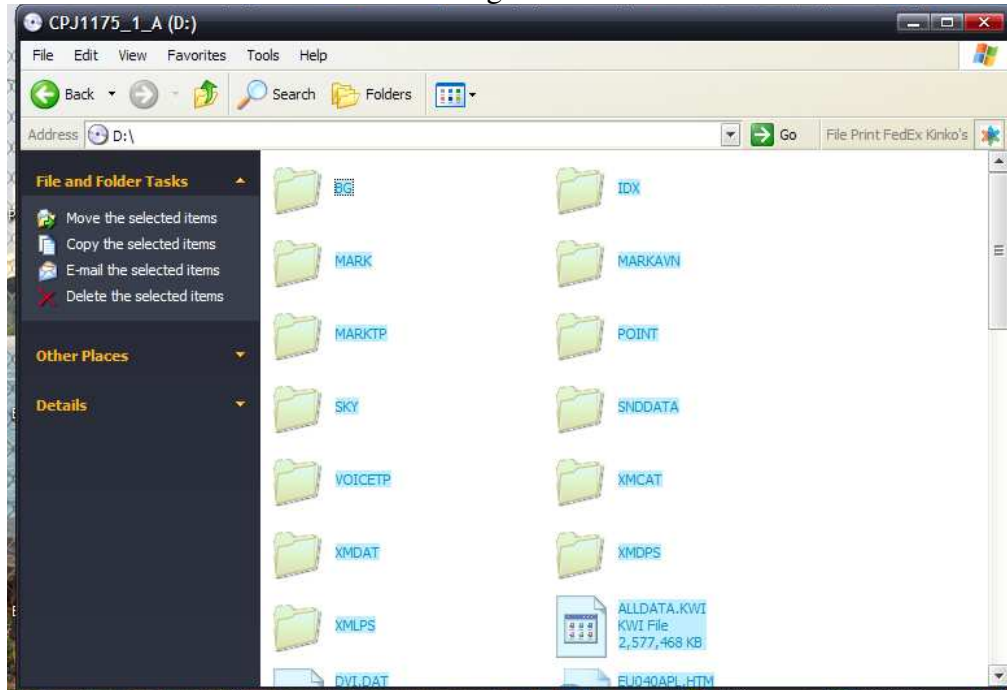


2. Open Nero, make sure you select DATA DVD.




3. Copy/Drag the selected files into Nero.

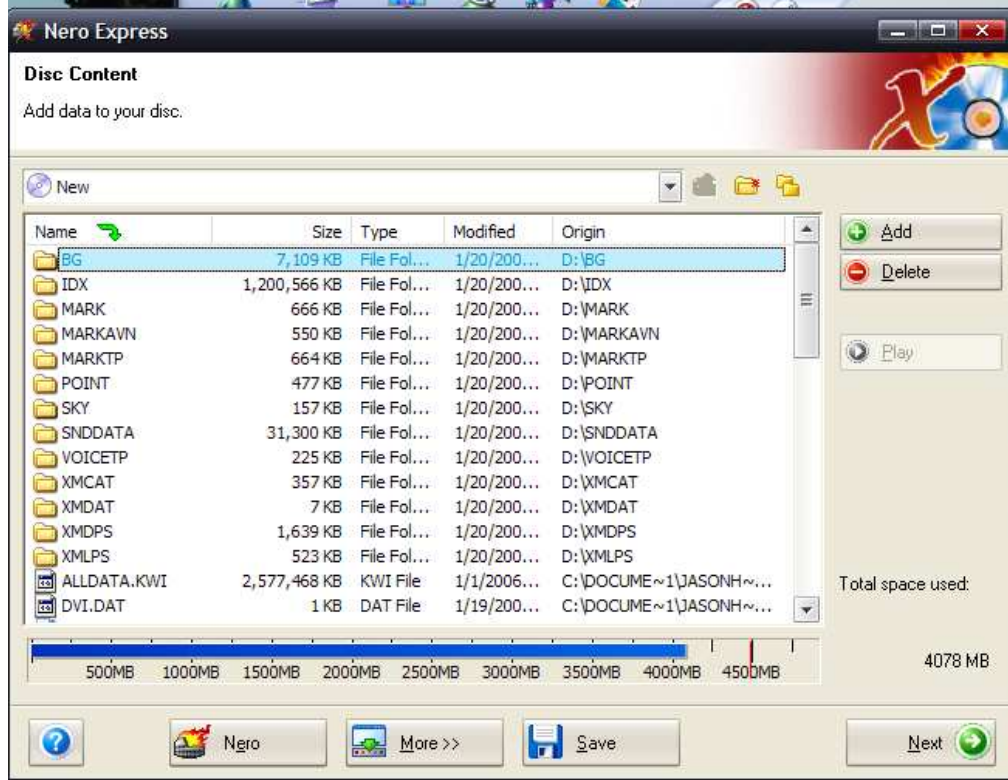

4. IF USING A SINGLE LAYER DVD: Navigate to the IDX Directory and delete: POIDT004.IDX, POIDT043.IDX, and POISR201.IDX through POISR207.IDX
5. Navigate to the BG folder, and then the PIM2DIN folder. Add or Delete any PIM files you want.

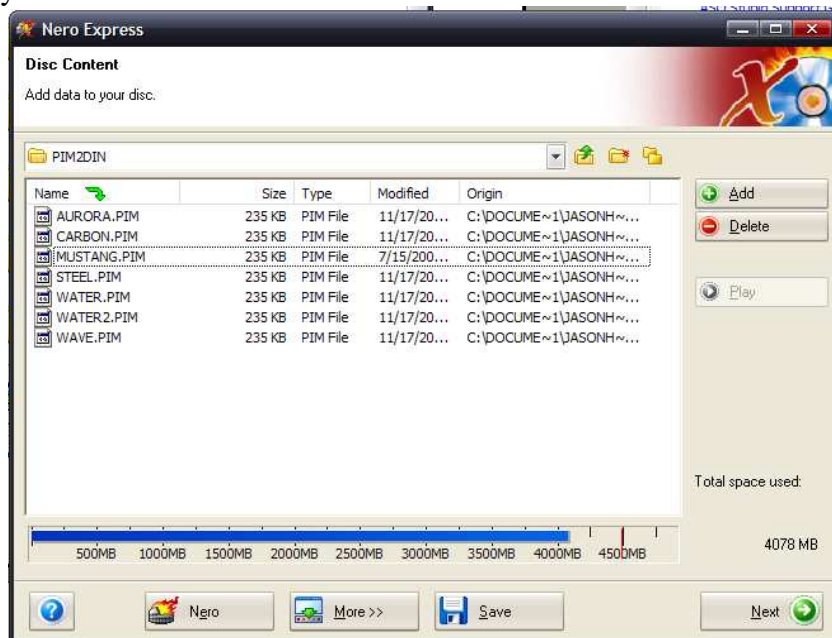

6. Add or delete any PIM files you want, such as MUSTANG.PIM
7. Click Next when finished adding files, make sure the Disc name is the same as the original. Make sure the “allow files to be added later” box is NOT CHECKED.

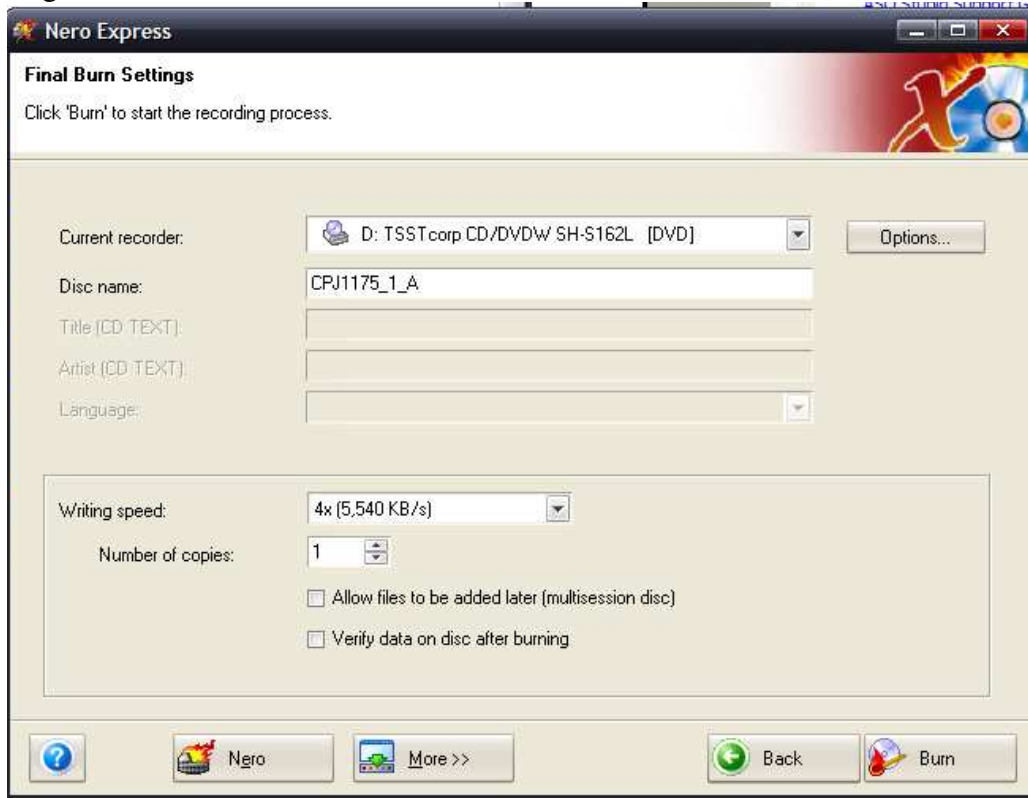

8. Click Burn.
9. You're Done!

Created By:

JasonH
AVIC411.com
Site Admin